

CATEGORY	EVENT ID	PARTITION	ZONE (Unique)	DESCRIPTION
SYSTEM TROUBLES	300	39	956	Panel Faulty - No activity detected from alarm panel indicating possible problem with panel.
	302	39	951	Battery Low – Battery voltage is low or absent.
	313	39	953/954	Engineering Reset (changed encryption key to prevent duplication of a unit) – No action required.
	337	39	950	DC Loss – 13.8V DC voltage low or absent.
	338	39	951	Battery Fail – Battery voltage is low or absent.
	350	39	953	Fail To Communicate – SDI-10 experienced trouble sending signals do not expect restore.
	351	39	954/956	Phone Line Fail (No voltage).
	352	39	955/956	Dialer Interface Lead Fail – Issue with dialer lead between SDI-10 unit and the alarm panel (4 Wire).
	353	39	956	Serial Interface Fail – Issue with SDI-10 unit serial connection to SDW-100-3G
	356	39	970	SDW-100-3G outstation is offline.
GENERAL ALARMS	137	39	983	Tamper – SDI-10 box tamper.
	140	39	981	Auxiliary 1 – Auxiliary input on SDW-100-3G unit.
	140	39	982	Auxiliary 2 – Auxiliary input on SDW-100-3G unit.
	140	39	983	Auxiliary 3 – Auxiliary input on SDW-100-3G unit.
	140	39	984	Auxiliary 4 – Auxiliary input on SDW-100-3G unit.

For more information and FAQ's on any of our products or services please visit us online at www.globetelecom.com.au

Level 8 - 499 St Kilda Road Melbourne VIC 3004
Phone 1300 737 314
Email support@globetelecom.com.au